




FITTING INSTRUCTIONS

31AU and AV

Thank you for purchasing a set of bushes for your DEW platform-based vehicle. The following instructions will help you fitting these bushes correctly to ensure optimal performance.

The bags contain 2x 31AU and 2 tubes for 31AU set and 2x 31AV and 2 tubes for 31AV set.

31AV
The flange faces towards the front of the car.

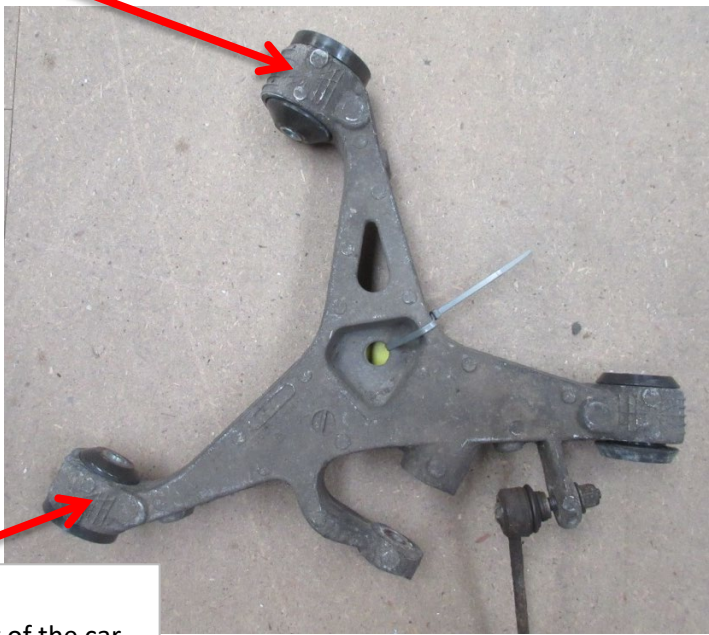

31AU
The flange faces towards the rear of the car.

If you have any questions regarding the fitment of these bushes, please give us a ring on

01978664316 or send us an e-mail on sales@polybush.co.uk.