




FITTING INSTRUCTIONS

C1 PLATFORM - 40AW PART SET

Thank you for purchasing a set of 40AW bushes for your C1-platform based vehicle. The following instructions will help you fitting these bushes correctly to your vehicle.

The bag contains two bushes that are substantially different: 1x 40AW and 1x 40AQ.

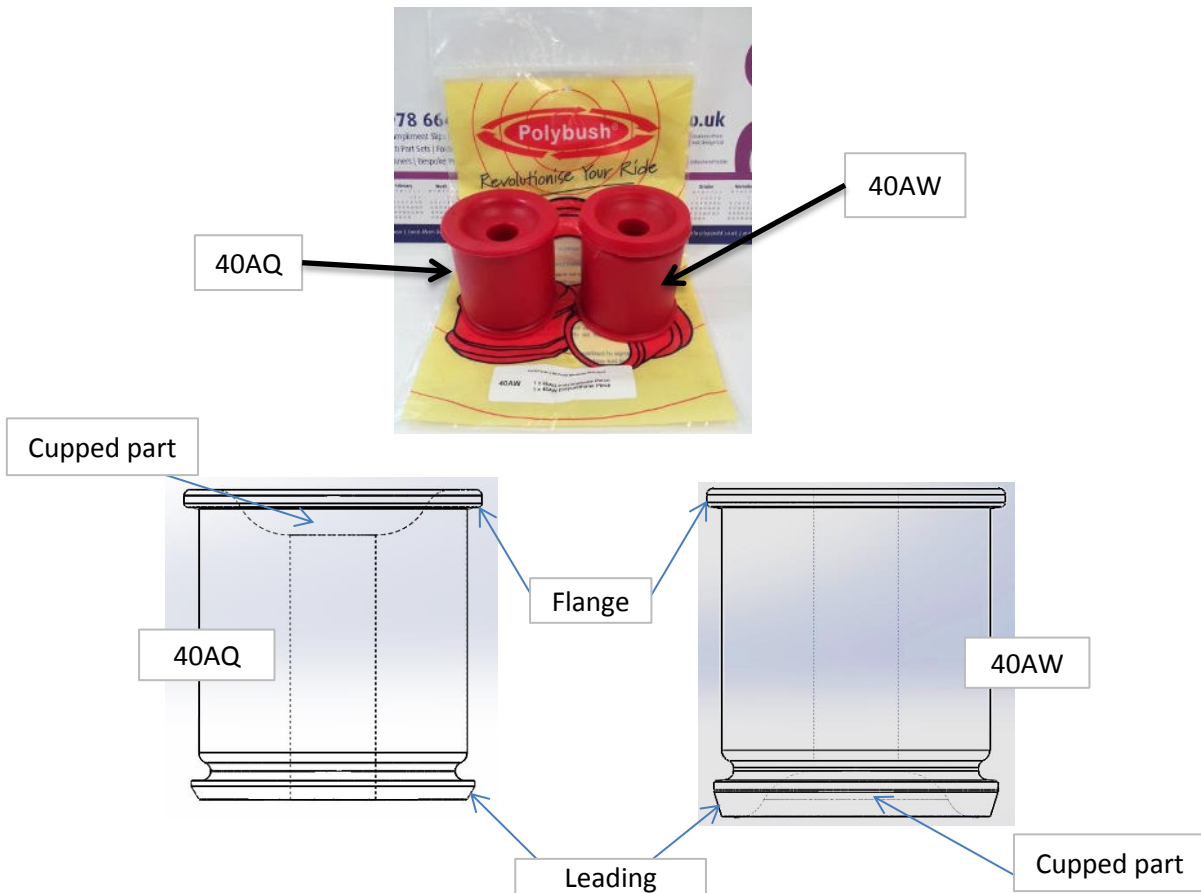

The brackets on your model are not handed: one end of the bracket has a turned in lip, this lip will face towards the front of the vehicle on one side and towards the rear on the other side. Note that the cupped end of the bush must always face forwards towards the wishbone.






FITTING INSTRUCTIONS

C1 PLATFORM - 40AW PART SET

Both bushes should be inserted leading edge first into the end of the bracket without the lip, washing up liquid can be used to ease insertion.

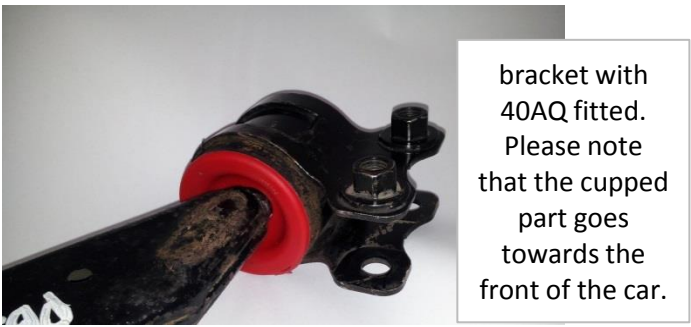

When the bracket is fitted back to the car the cupped end must face forward.



If you have any questions regarding the fitment of these bushes, please give us a ring on 01978664316 or send us an e-mail on sales@polybush.co.uk.