


FITTING INSTRUCTIONS
41AY - Front Lower LH Engine Mount Insert
41AY Contains:

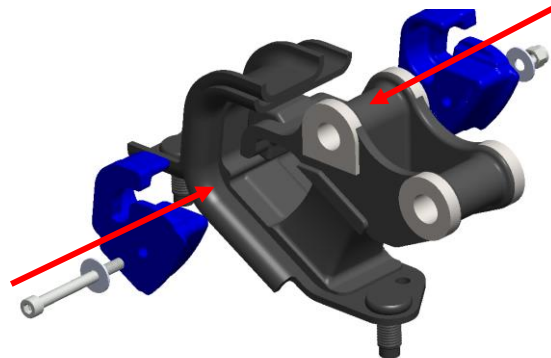
41AY Poly Piece
 41AZ Poly Piece
 1 x M5x50 Cap Head Bolt
 2 x M5 Penny Washers
 1 x M5 Nyloc Nut

Step 1:

This insert can be installed in situ. It may require some/all off the engine weight to be lifted off this mount to aid fitting.


Step 2:

Insert both 41AY & 41AZ Halfs into either side of the mount until flush with the mount edges.


Step 3:

Insert the bolt with a washer either side

Step 4:

Tighten the nyloc nut up until there is some pressure on the insert but not enough to too bludge the inserts.



If you have any questions regarding the fitment of this bush, please give us a ring on
 01978 664316.

or send an e-mail to sales@polybush.co.uk.