



FITTING INSTRUCTIONS


VW Transporter T5/6 - KIT 211

Front Wishbone

44EA Contains
2 x 44EA (Rear Bush)
2 x 44EB (Front Bush)
2 x 27T Tubes

44EC Contains
2 x 44EC
2 x 44EC Tubes

Note: Before fitting, ensure bore surface is prepared by removing any rust or other contamination.

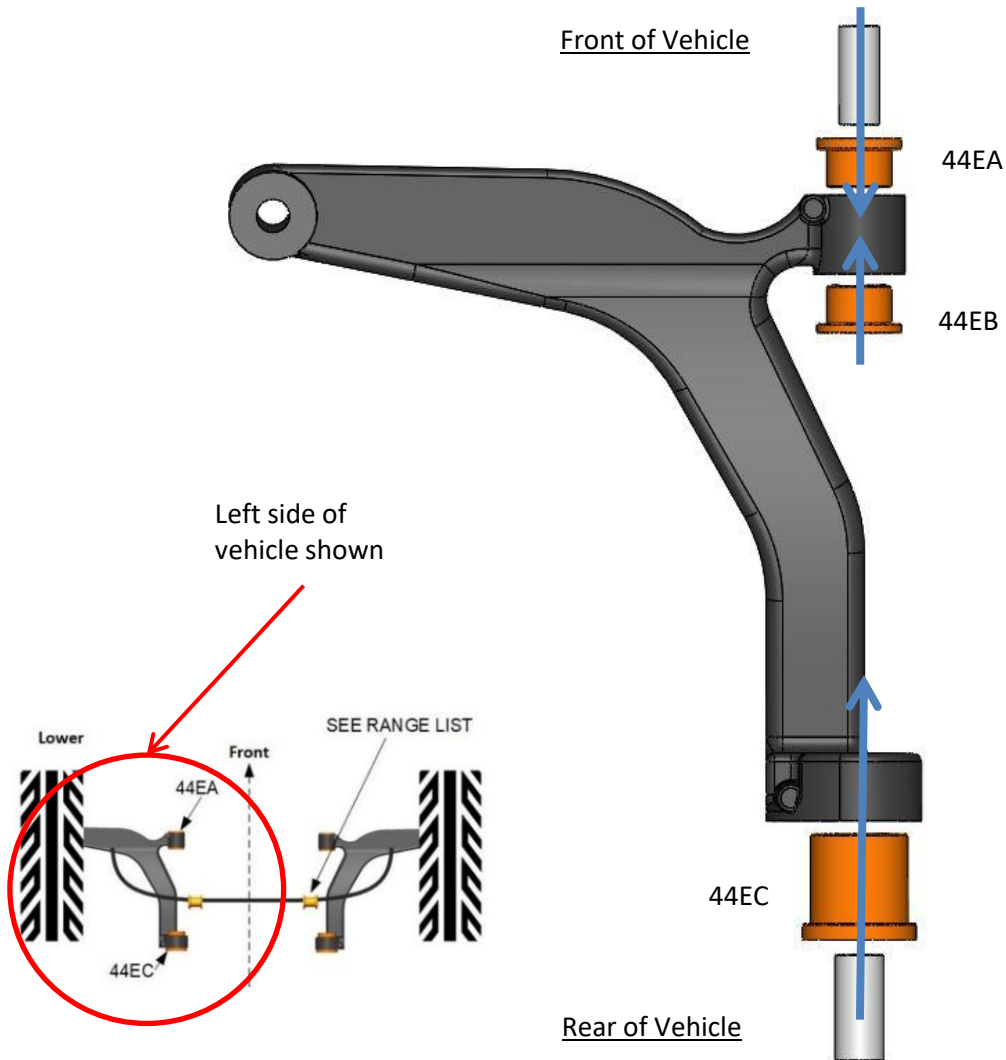



FITTING INSTRUCTIONS

Rear Trailing Arm


44EE Contains

- 2 x 44EE (Outer Bush)
- 2 x 44EF (Inner Bush)
- 2 x 44EE Tubes

44EG Contains

- 2 x 44EG (Inner Bush)
- 2 x 44EH (Outer Bush)
- 2 x 44EE Tubes

Front of Vehicle

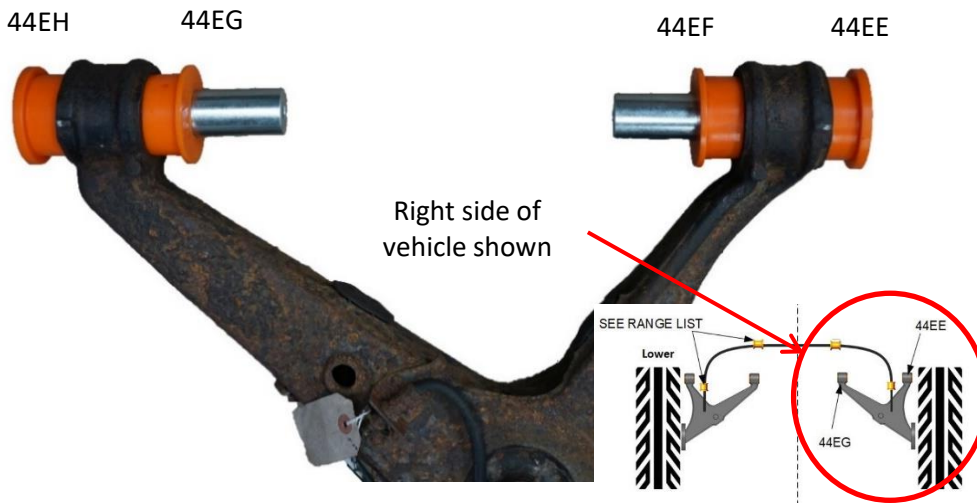

Rear of Vehicle

44EG is an eccentric bush and has to be oriented correctly.

There is a small notch on the top of the wishbone to help with alignment.



If you have any questions regarding the fitment of these bushes, please give us a ring on 01978 664316 or send us an e-mail on sales@polybush.co.uk.