



FITTING INSTRUCTIONS

24T - Front Wishbone Front Bush

24T Contains:

- 2 x 24T Polyurethane Pieces
- 2 x 24X Polyurethane Pieces
- 2 x 24T Tubes

Step 1:
Remove the existing bush.

Step 2: **IMPORTANT**

Using a file or emery paper, remove any sharp edges from the bore on both edges. Failure to do so can lead to damage of the bush.



Step 3:
Fit 24T bush to the front side of the wishbone.
NOTE: This bush has the thinner flange.

Step 4:
Fit 24X bush to the rear side of the wishbone.
NOTE: This bush has the thicker flange.

Step 5:
Insert the inner tube until flush either side of the bush.

Step 6:
Refit wishbone to the vehicle and torque to manufacturers settings.

RH Wishbone
Shown

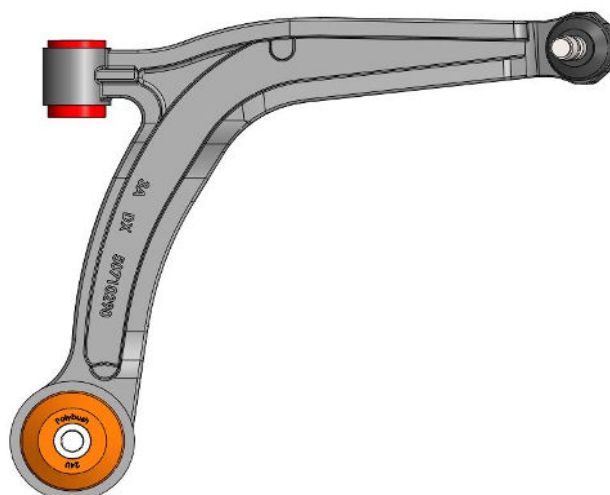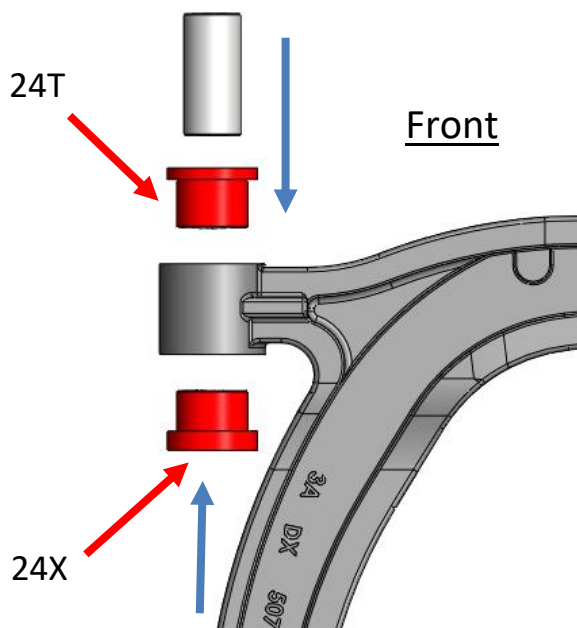

If you have any questions regarding the fitment of these bushes, please give us a ring on 01978 664316 or send an e-mail to sales@polybush.co.uk.