




FITTING INSTRUCTIONS

47L - Rear Axle Bush

47L Contains:

2 x 47L Poly Pieces
2 x 47M Poly Pieces
2 x 47L Inner Tubes

LH Side
Shown

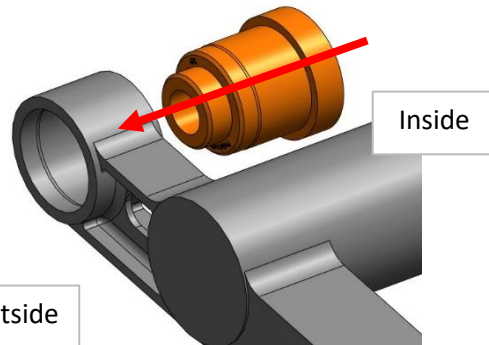

Step 1:


Remove the existing bush.

Step 2:

Ensure bores are clean from debris and remove any sharp edges.

Step 3:

Push the bush in from the inside to the outside of the vehicle. The flange should be on the inside of the axle.

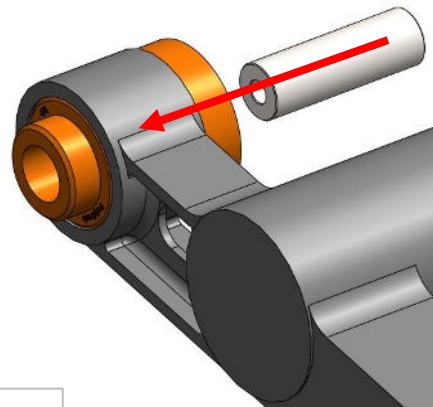


Step 4:

Push in the inner tube until flush either side of the bush.

Step 5:

Push the 47M Poly Washer over the end of the 47L Bush ensure the chamfered side is facing outwards.

Chamfer to
outside

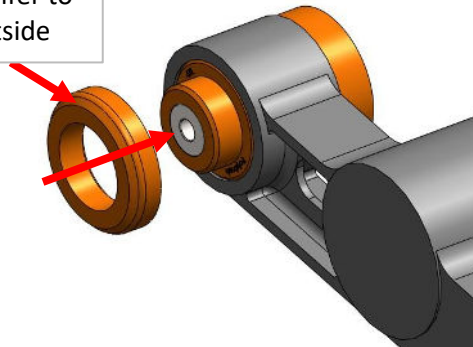


Step 6:

Reattach the mounting bracket and loosely tighten.

Step 7:

Reattach the mounting bracket to the vehicle and torque to manufactures settings.

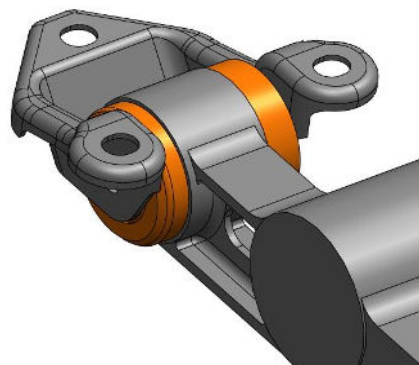

Step 8:

Settle the vehicle at ride height and torque the rear axle bush to manufactures settings.

If you have any questions regarding the fitment of these bushes, please give us a ring on 01978 664316 or send us an e-mail sales@polybush.co.uk