FITTING INSTRUCTIONS

12AA/12Z FITTING INSTRUCTIONS

Thank you for purchasing a set of bushes for your Nissan Micra K11. The following instructions will help you fitting these bushes correctly to ensure your complete satisfaction.

The bag for 12AA contains 4x 12Z polyurethane pieces, 2x 12AA inner tubes and 2x 12AA outer tubes. The outer metals have an excentric bore to allow the links to be re-fitted properly to the car. 12Z contains the same number of polyurethane castings and inner tubes but uses 12Z outer metals.

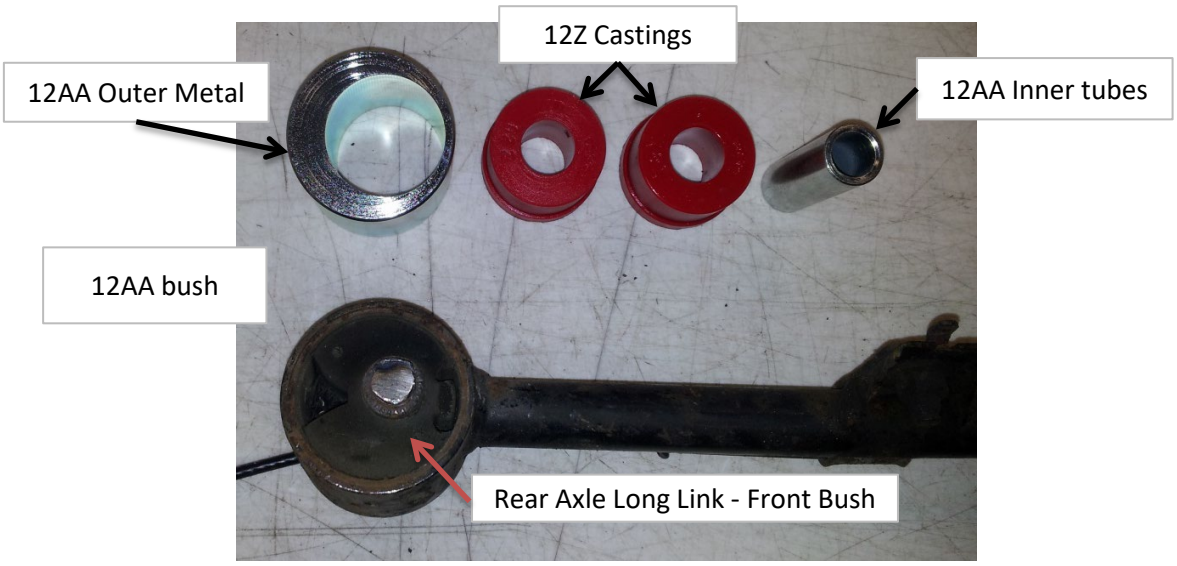

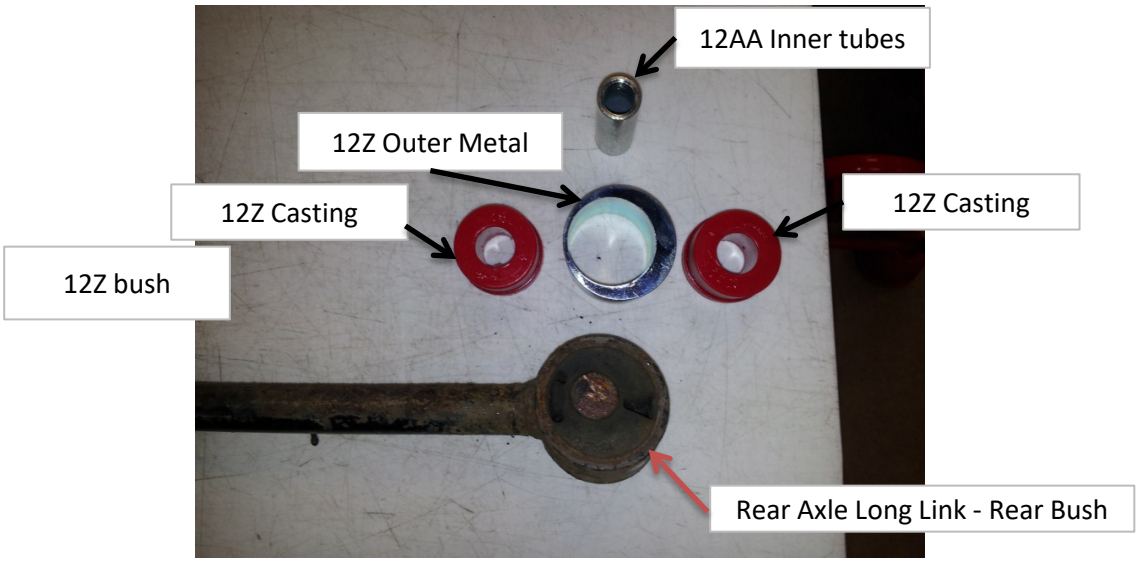

The rear suspension of the Nissan Micra K11 features two long links, two short links and a panhard rod.
Only the long and short links will be covered here.

FITTING INSTRUCTIONS

12AA/12Z FITTING INSTRUCTIONS

Fitting 12AA and 12Z to the long links requires the excentric bore of the outer metals of each bush to be placed such as it is facing the centre of the arm.

Fitting 12AA to the shorter links is different. The excentric bore needs to be facing the end of the arm, not the centre of it in order to replicate the original bush.

If you have any questions regarding the fitment of these bushes, please give us a ring on

01978664316 or send us an e-mail on sales@polybush.co.uk.